

Berotec Gen 2 Installation Instructions

Berotec Gen has the capacity to have 2 x Sensors reading on the dash panel at the same time.



RPM

Gear selected

Sensor 1


Sensor 2

Ambient temp

To access menu from this point touch screen, menu options will appear




If you are only using 1 sensor screen will show menu window

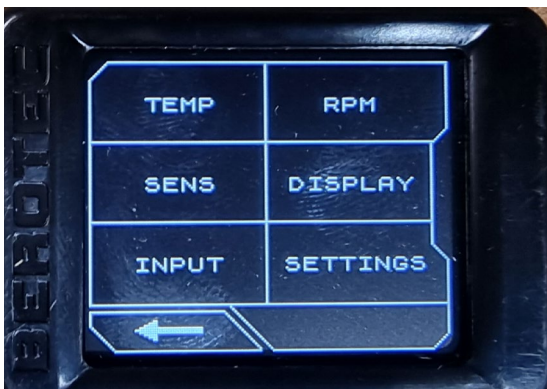

Select which part of the menu you want by touching the window

Berotec Gen 2 Installation Instructions

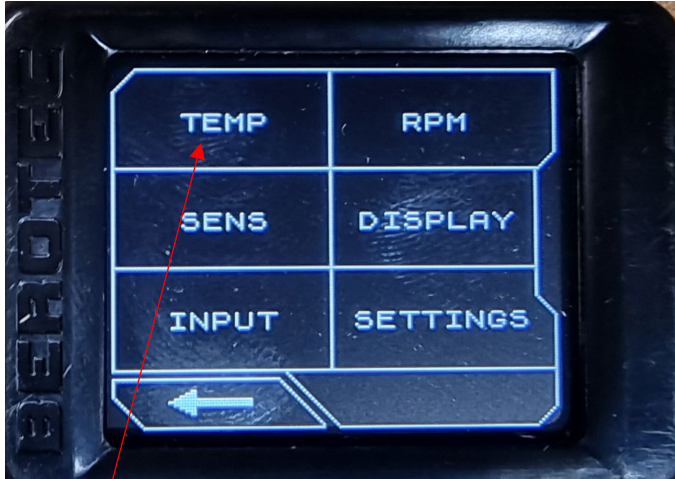

Press Temp




Max temperature alarm setting


Temp setting for when gear change RPM is normal.
When engine is below this set temperature the unit flashes and goes white at the RPM you set as cold RPM in RPM window

Ice warning temp

Berotec Gen 2 Installation Instructions

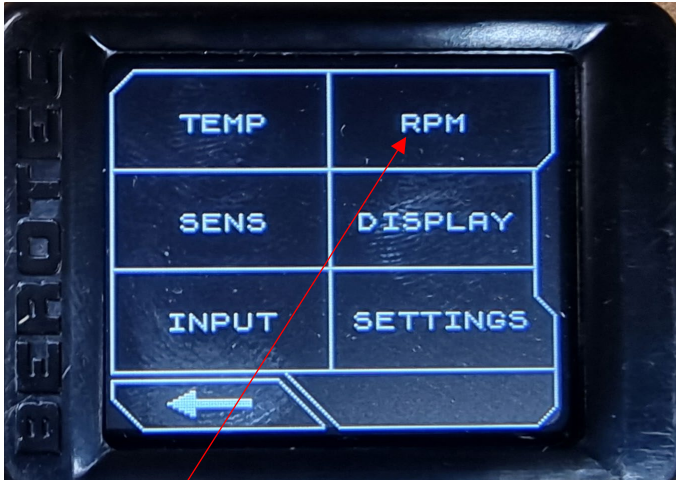

Press this

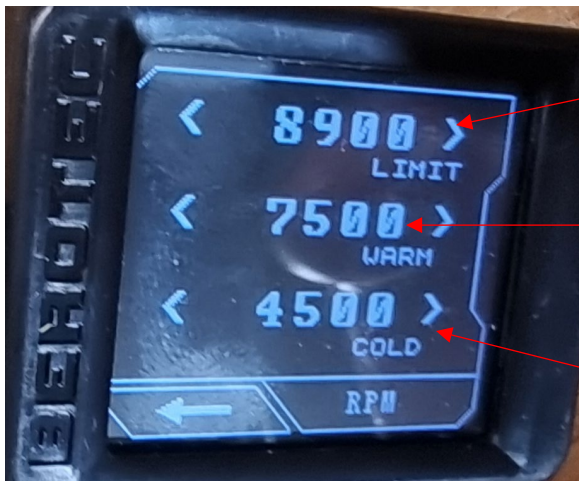


Set value for Max
RPM warning


This value is when you
receive a warning of
high RPM (EG orange
bar) when engine is
above the hot temp
from previous window

This is the RPM that the
unit will flash and go
white when it is exceeded
when engine temp is
below the HOT temp set
in the previous window

Berotec Gen 2 Installation Instructions

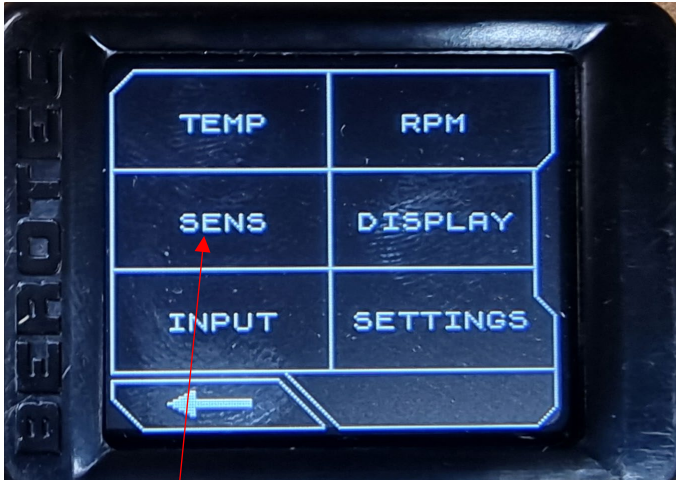


Press this

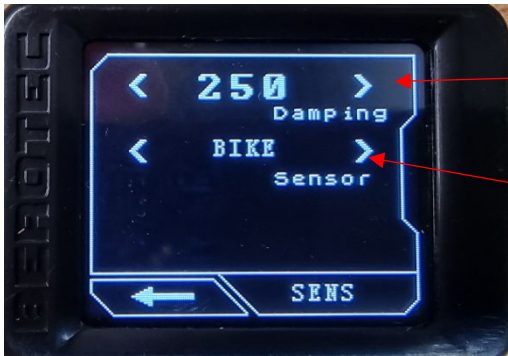

Leave this as 250

Make sure this is on BIKE

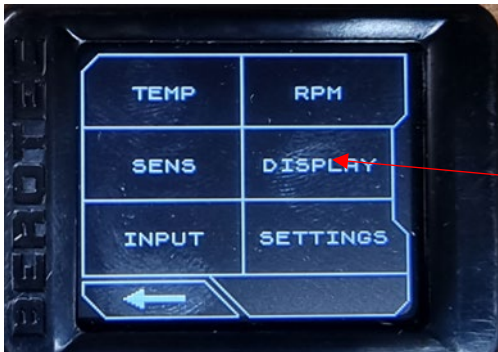

Press this


Berotec Gen 2 Installation Instructions



This arrow scrolls through all the colours available for the layout.


This arrow rotates the display layout

Scroll through different layouts of the display

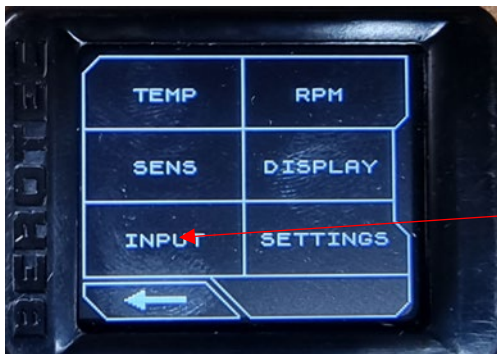

Press this one

Berotec Gen 2 Installation Instructions

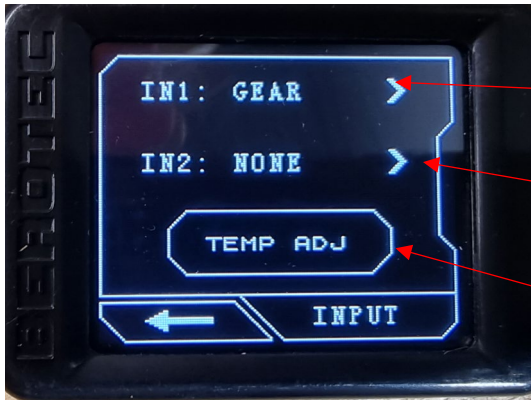

Press the arrow to access the gear calibration window


If you have a second sensor scroll through to set the correct one

This is to adjust temperature if the values on the unit appear incorrect



This is the gear you are in once it is calibrated it will go green

Make sure bike is in 1st gear then press calibrate. Once calibrated the top line turns green. Arrow to the next gear and repeat. Repeat this for each gear

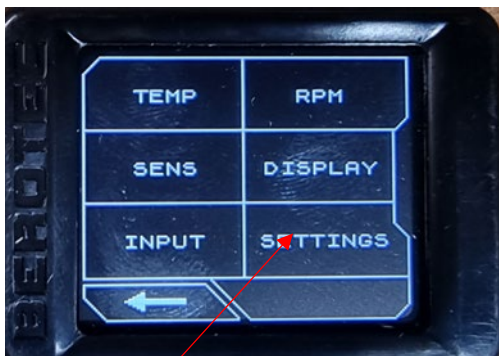


Settings you don't have to worry to much about

Hope this helps you setup your unit. You can try different colours and different layouts to see what works for you

Berotec Gen 2 Installation Instructions


Setup your unit on the bike

EXCf/FE

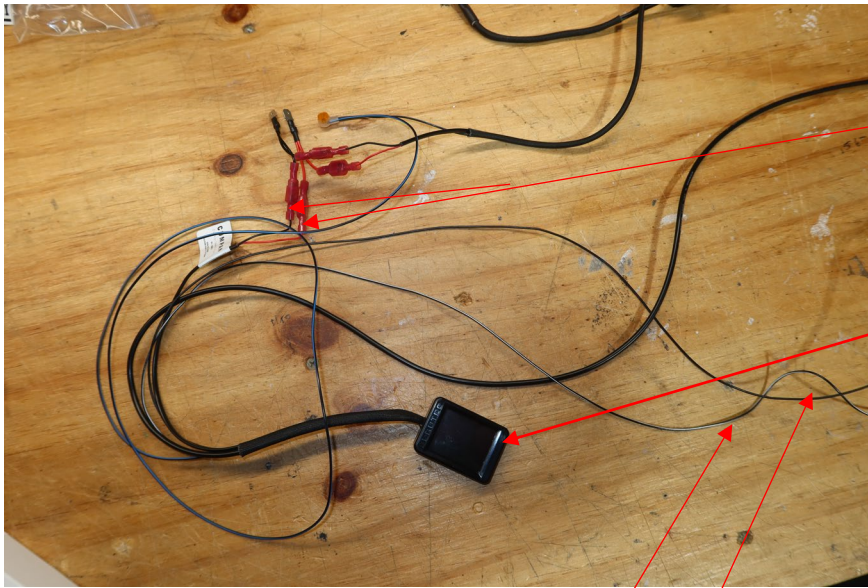

Head unit power connections.
Red power
Black earth (A1)

Head unit

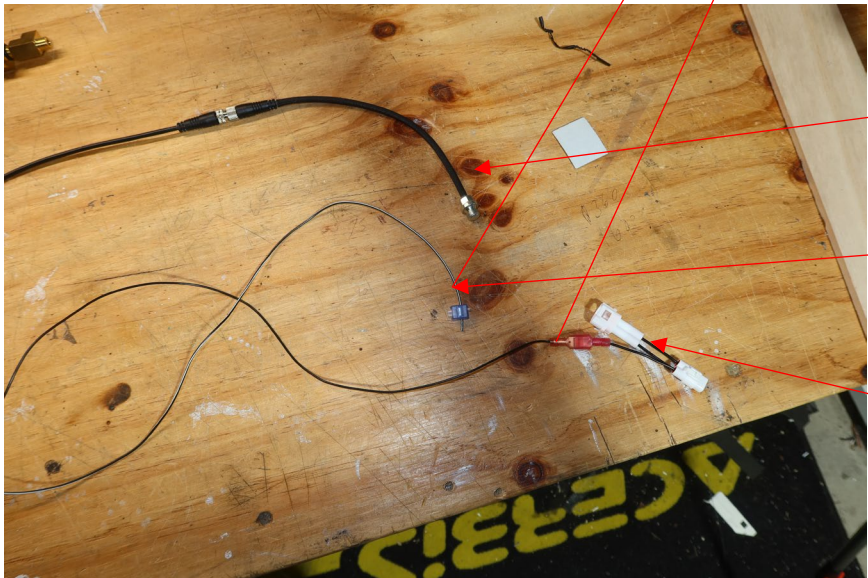


Temp sensor oil or water A3

Gear shift input

Tacho input
Bridge and tacho input wire
(A2)

If using one sensor input these are all the connections required

Berotec Gen 2 Installation Instructions

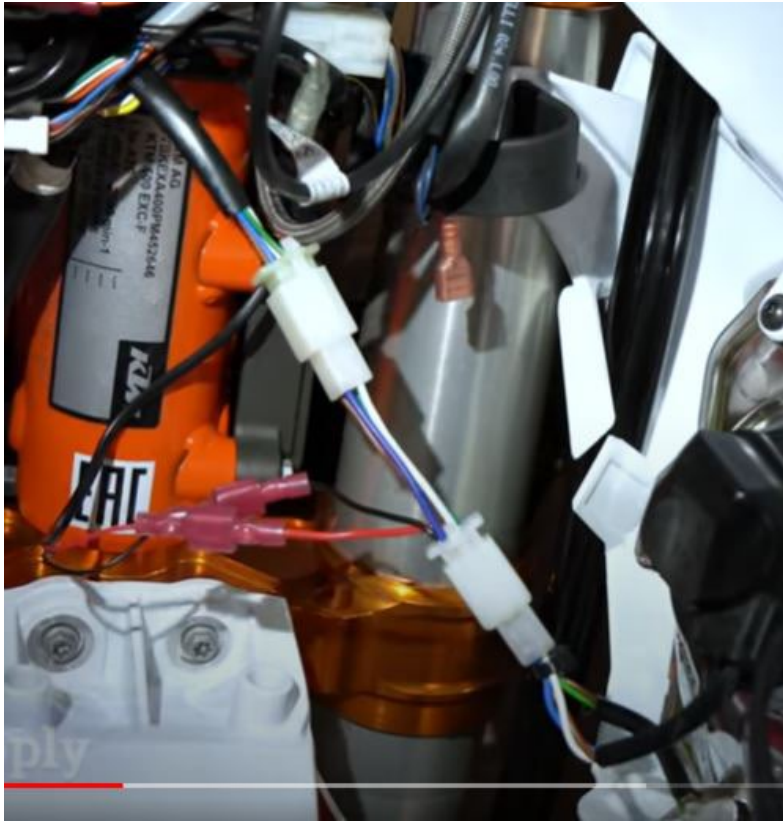

A1


Connect positive and negative from headlight wire bridge that comes in the kit



A2


Fit Tacho input bridge into white plug on LHS of bike behind the cylinder head. Then connect the Tacho pickup wire black with pinky coloured blade terminal

Berotec Gen 2 Installation Instructions

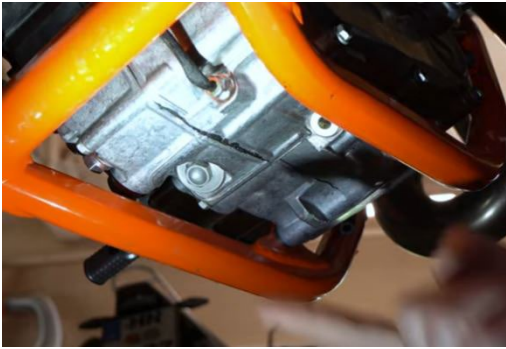

A3

For oil temp screw temp sensor into this plug on 450/500/501 when using M10 sensor, when using ABC clutch cover use M6 and screw into rear port on cover. For 250 and 350 you will need to use a drain plug drilled and tapped to suit the sensor if you require oil temp

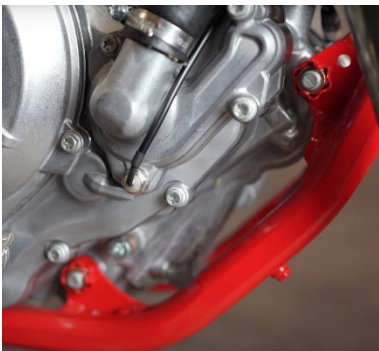

A3
Sensor used in coolant drain plug



A4




A4

Use connector supplied to connect black with white strip from head unit Cumpan
To White wire on 3 pin plug from gear sensor.


Berotec Gen 2 Installation Instructions

If you are only using one sensor you are finished the connections. For 2nd sensor next page

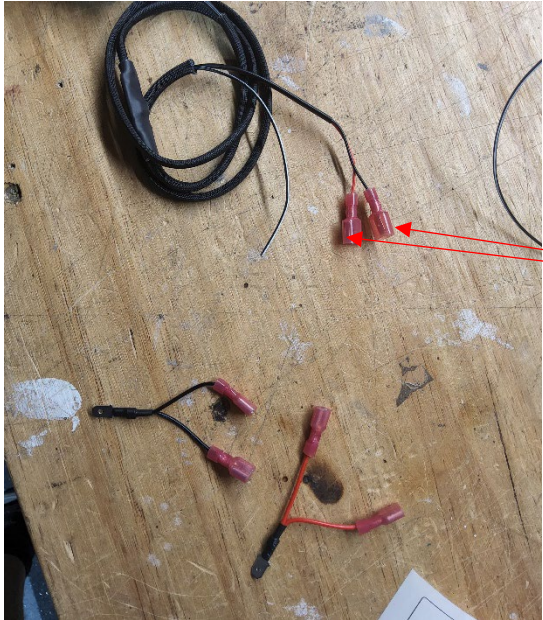

Positive and negative for 2nd sensor plugs into bridge

Input wire from second sensor connects to Black and Blue wire from head unit using connector supplied

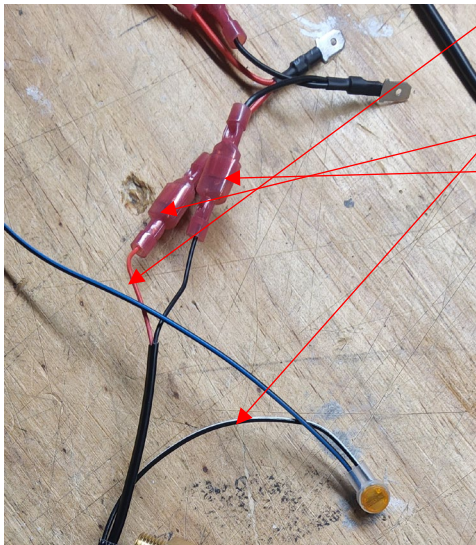

Bridges for positive and negative these allow 2 x electrical connections from 1 outlet.
Plug these into Bridge on headlight cable. Head unit power plugs into these and also power for 2nd sensor plugs into these.

Oil pressure switch installation, electrical connections are the same with both oil pressure and temp sensor.

Now setup the dash panel as per first page.