


Adventure Bike Components & Accessories  
701 fuel tank breathers with Charcoal canister  
Balanced tanks

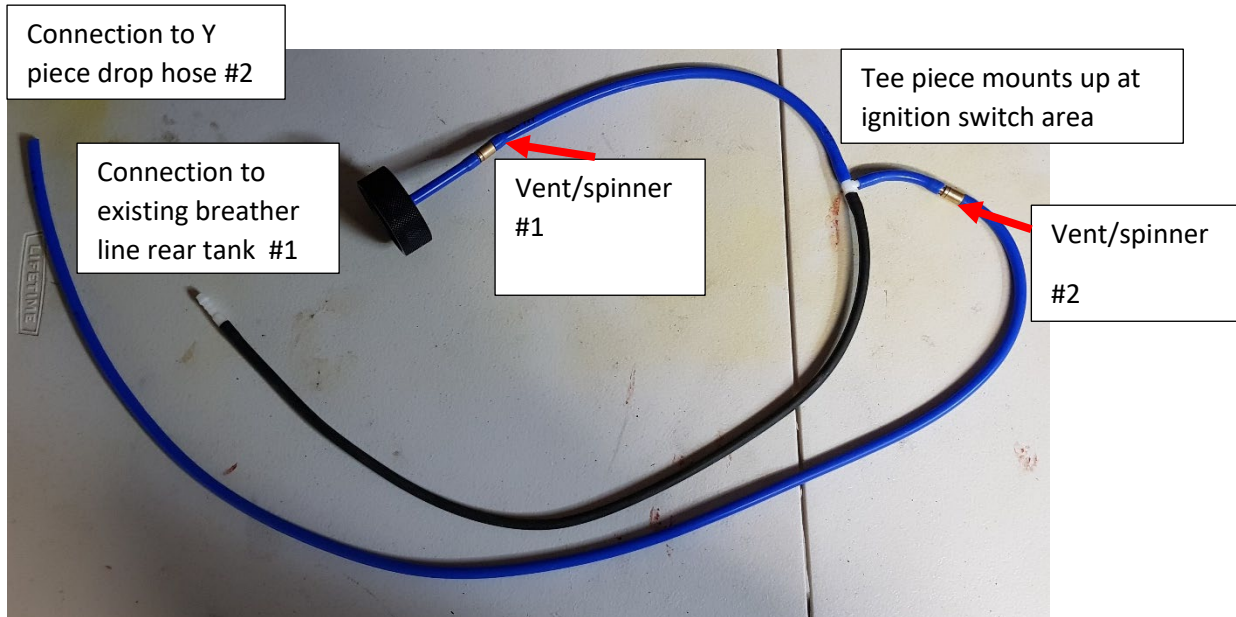


- Brass breather/spinners must mount vertical red end toward potential fuel flow. Also these need to be mounted above fuel level.
- Ensure hoses are not kinked or tied to tight clamping off
- Hoses can be shortened as required




Adventure Bike Components & Accessories  
701 fuel tank breathers with Charcoal canister

Balanced tanks

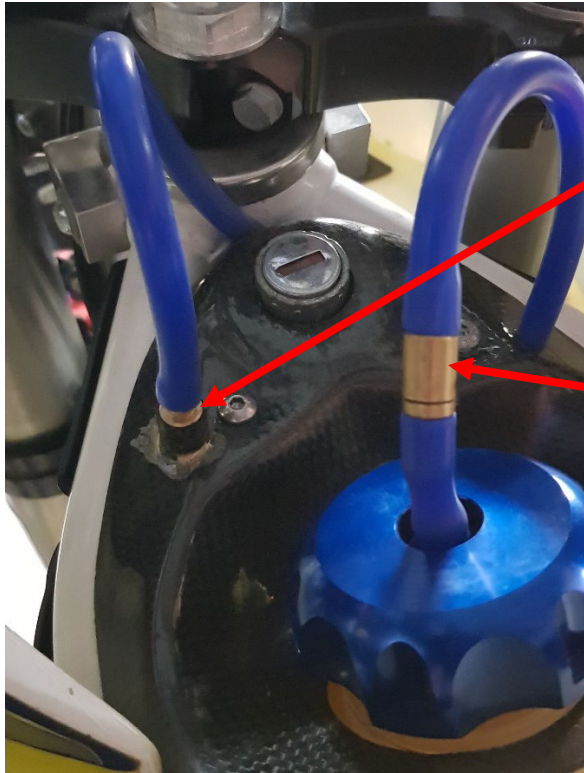

Vent/spinner  
#2

Vent/spinner  
#1

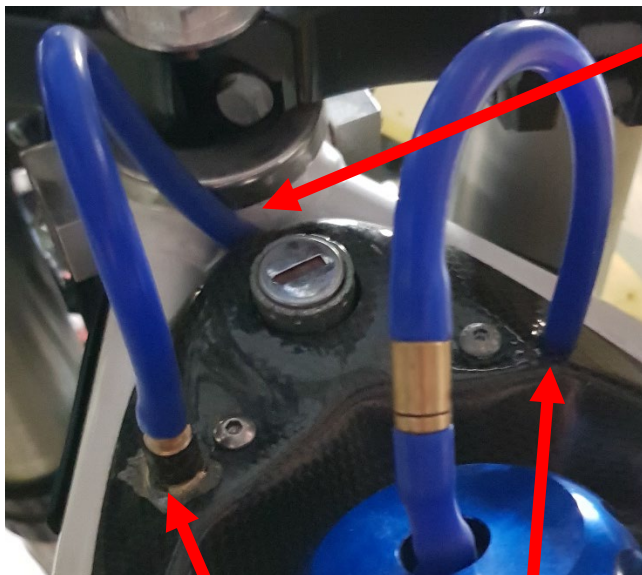

Make sure hose is not clamped off  
between frame and carbon cover

requires drilling 2x 8mm holes into carbon cover

Adventure Bike Components & Accessories  
701 fuel tank breathers with Charcoal canister  
Balanced tanks



This side of Y piece stays connected to charcoal canister