


PERUN MOTO YAMAHA TENERE 700 TIE-DOWN BRACKETS - INSTALLATION INSTRUCTIONS

Content of the kit


- 2 x Tie-down brackets (LHS and RHS)
- 4 x M8x20 button head TX bolt
- 4 x M8 flat washer



1. Remove stock passenger foot peg brackets. Undo the two bolts per side and remove the brackets.

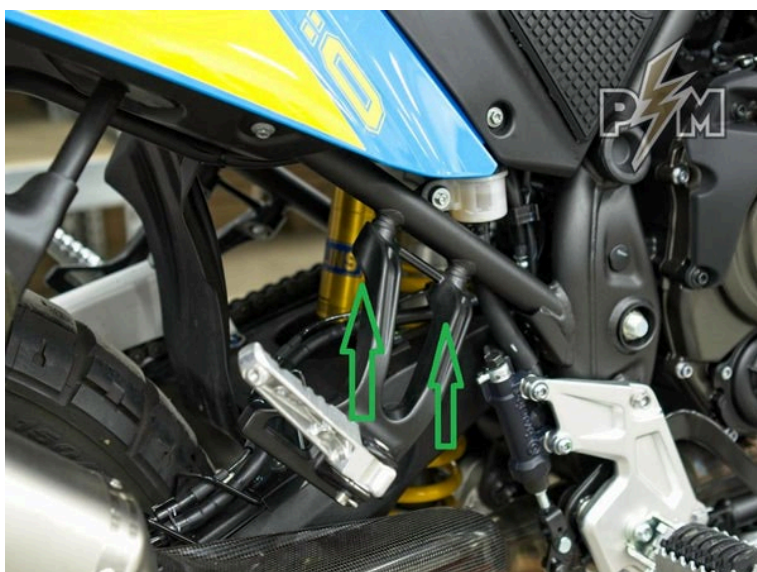

2. Clean the threaded holes.

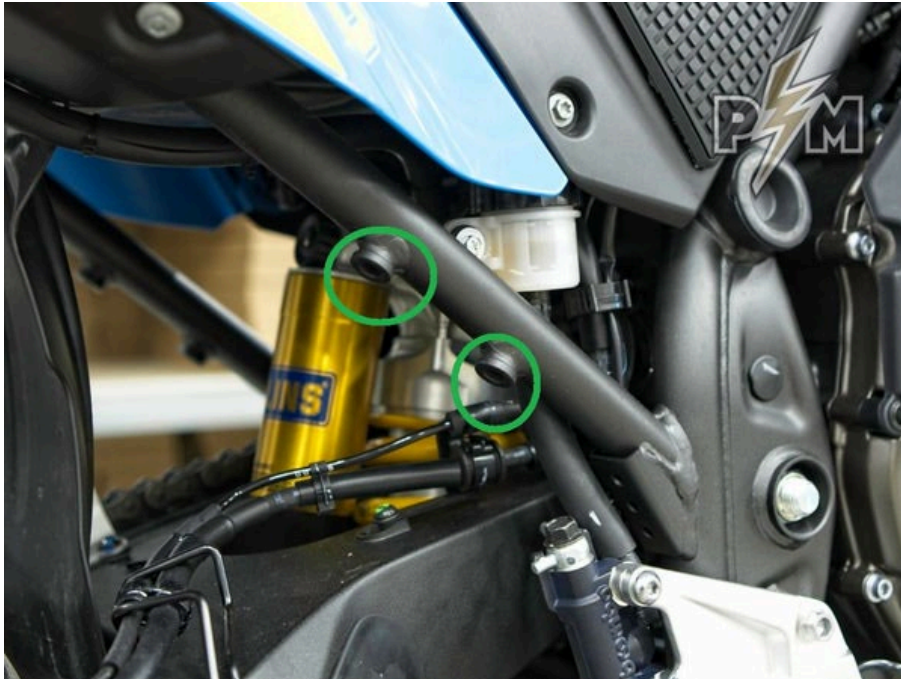

4. Install the RHS Tie-down bracket, as shown. Use provided M8x20 button head bolts and M8 flat washers from the underside.

Use thread-locker (Loctite 243 or similar). Torque to 8-10 Nm.



5. Repeat on the other side.

6. After few rides, re-torque to spec.

v